

Termohigrómetro De Panel

HT-HE230A


www.twilight.mx







Operation manual for HE2XXA series large screen Thermo-Hygrometer

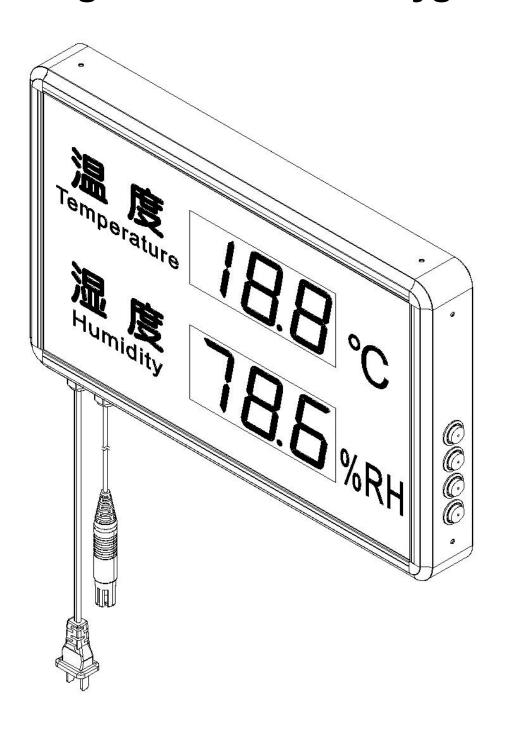

Products Introduction

HE2XXA Series large screen Thermo-Hygrometer developed by HUATO, which has high precision and recording functions. Adopt imported temperature humidity integrated sensor, fast response and good quality to assure the accuracy and stability.

1. Features:

- Fashionable and simple performance, firm structure, high accuracy.
- Adopt LED digital tube display, clear and bright, visible distance is 10~50meters.
- Temperature humidity calibration function; values can be adjusted through buttons on the instruments.
- Recording capacity: >=43000, RS232-USB interface.

2. Applications:

It has been widely applied in offices, hotel, canteens, school, factory, supermarket, warehousing, hospital, and indoor environment etc.

3. Performance parameters:

Model	HE218A	HE223A	HE230A	HE240A	HE250A
Temperature accuracy	±0.5°C	±0.5°C	±0.5°C	±0.5°C	±0.5°C
Humidity accuracy	±3%RH	±3%RH	±3%RH	±3%RH	±3%RH
Sensor type	External sensor with 3 meters cable				
Measurement range	-40~85°C	-40~85°C	-40~85°C	-40~85°C	-40~85°C
Measurement range	0~100%RH	0~100%RH	0~100%RH	0~100%RH	0~100%RH
LED size (inch)	1.8"	2.3"	3"	4"	5"

Operation manual for HE2XXA series large screen thermo-hygrometer

Visual range (M)	20	30	40	50	50
N. W(kg)	2.3	2.3	2.3	3.2	3.2
Product dimension(CM)	39.5×25.5×5	39.5×25.5×5	39.5×25.5×5	60.1×38.3×5	60.1×38.3×5
Packing dimension(CM)	46×31.5×8.5	46×31.5×8.5	46×31.5×8.5	66.4×43.3×8.5	66.4×43.3×8.5

4. Starter:

(1) Buttons and components



- power and plug
- 2 External sensor
- Temperature display area
- 4 Humidity display area

- OK button
- 6 upward button
- downward button
- 8 Menu function button

5. Key usage:

S Key function

Normal mode: press senter setup mode, press enter temperature setting,

press or button respectively to adjust the value.

Key function

Normal mode: Press this key is invalid.

Setting mode: Set a negative value.

Key function

Normal mode: Press this key is invalid.

Setting mode: Set a positive value.

Key function

Normal mode: Press this key is invalid.

Setting mode: Confirm button and enter the next step.

For example: Standard temperature is 16 $^{\circ}$, humidity is 66%RH, and the measuring temperature is 15.3 $^{\circ}$, humidity is 66.8%RH. Then difference of temperature is -0.7 $^{\circ}$, difference of humidity is +0.8%RH.

Setting Steps: first, press senter setup mode, then press enter temperature deviation setting state; press to adjust the temperature is -0.7 °C, press enter humidity settings, and press to adjust the humidity value is +0.8%RH, then press back to normal mode



ULÁMANOS

+52(81) 8115-1400 / +52 (81) 8173-4300

LADA Sin Costo: 01 800 087 43 75

E-mail: ventas@twilight.mx



